

Dish Network Set-Ups

Stored in Super Buddy Meter

Select Service	Select System	Select LNB	Meter Automatically Selects Switch	LNB Soft Keys			
				LNB 1	LNB 2	LNB 3	LNB 4
Dish Network	Dish 1000	Dish 1000	DpPlus	119	110	129	-----
		Dish 1000 / 61.5	DpPlus	119	110	129	61.5
		Dish 1000 / 148	DpPlus	119	110	129	148
	Dish Pro Plus	DP Plus / Twin	Dp Twin	119	110	-----	-----
		DP Plus / 61.5	DpPlus	119	110	61.5	-----
		DP Plus / 118.7	DpPlus	119	110	118.7	-----
		DP Plus / 121	DpPlus	119	110	121	-----
		DP Plus / 129	DpPlus	119	110	129	-----
		DP Plus / 148	DpPlus	119	110	148	-----
	Dish Pro	DP Twin	DpTwin	119	110	-----	-----
		Dish 500 / 61.5	Dp34	119	110	61.5	-----
		Dish 500 / 129	Dp34	119	110	129	-----
		Dish 500 / 148	Dp34	119	110	148	-----
	Dish 500+	Dish 500+ DP34/DPP33	Dp34	119	110	118.7	-----
		Dish 500+ DPP44	DPP44	119	110	129	118.7
	Dish 1000+	(N/A)	DPP44	119	110	129	118.7
	Dish 1000+/61.5	(N/A)	DPP44	119	110	61.5	118.7
	Dish 1000.2	1000.2	DpPlus	119	110	129	-----
		1000.2 / 61.5	DpPlus	119	110	129	61.5
		1000.2 / 118.7	DpPlus	119	110	129	118.7
		1000.2 / 121	DpPlus	119	110	129	121
		1000.2 / 148	DpPlus	119	110	129	148
	Dish500 Legacy	Twin Legacy	Twin	119	110	-----	-----
		Legacy / sw21	SW21	119	110	-----	-----
		Legacy / sw42	SW42/44	119	110	-----	-----
		Leg / sw64 61.5	SW64	119	110	61.5	-----
		Leg / sw64 129	SW64	119	110	129	-----
		Leg / sw64 148	SW64	119	110	148	-----
	Super Dish	Super 121	Dp34	119	110	121	-----
		Super 121 / 61.5	DPP44	119	110	61.5	121
		Super 121 / 129	DPP44	119	110	129	121
		Super 121 / 148	DPP44	119	110	148	121
	DP Single	Orbital 61.5	none	61.5	-----	-----	-----
		Orbital 72.7	none	72.7	-----	-----	-----
		Orbital 77	none	77	-----	-----	-----
		Orbital 110	none	110	-----	-----	-----
		Orbital 119	none	119	-----	-----	-----
		Orbital 129	none	129	-----	-----	-----
		Orbital 148	none	148	-----	-----	-----
	FSS Single	FSS 118.7	none	118.7	-----	-----	-----
		FSS 121	none	121	-----	-----	-----
	Legacy Single	Orbital 61.5	none	61.5	-----	-----	-----
		Orbital 72.7	none	72.7	-----	-----	-----
		Orbital 77	none	77	-----	-----	-----
		Orbital 110	none	110	-----	-----	-----
		Orbital 119	none	119	-----	-----	-----
		Orbital 129	none	129	-----	-----	-----
		Orbital 148	none	148	-----	-----	-----
		110 Stacked	none	110	-----	-----	-----
		119 Stacked	none	119	-----	-----	-----
	1000.4 E. Arc	1000.4 Triple	DpPlus	72.7	61.5	77	-----
		1000.4 Triple/110	DpPlus	72.7	61.5	77	110
		1000.4 Triple/118.7	DpPlus	72.7	61.5	77	118.7
		1000.4 Triple/121	DpPlus	72.7	61.5	77	121

After powering up the Super Buddy and pressing the SYST soft key, the selections shown above are available. Select the appropriate service, system, and LNB for your application. To make selections, arrow up or down to the item to change and press Enter, then arrow up or down to the desired option and press Enter. Press EXIT or DONE to return to the RUN mode. The switch type is automatically entered based on your SYSTEM and LNB selection. After choosing the System and LNB type, connect the Super Buddy to your LNB. Press the LNB soft key to power the LNBs. For multi-sat/LNB systems, use the LNB soft key to power and toggle between the different sats/LNBs. The satellite associated with each LNB selection is shown in the upper left corner of the Super Buddy's LCD screen. For single-sat/LNB systems, use the left/right arrow buttons to select different satellites.