


#### REPLACEMENT REMOTE CONTROL SELECTION GUIDE

These replacement options represent the current "best choice" (for product compatibility and providing the latest device database). Business considerations may require other alternatives; for product compatibility purposes, EchoStar Technologies L.L.C. must approve any such alternates.

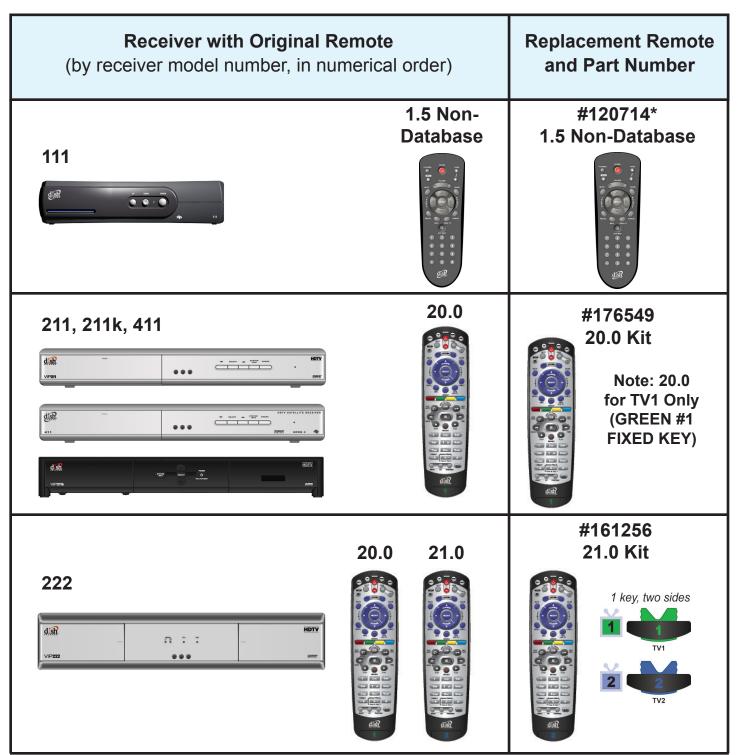

<sup>\*</sup> These items are only available through Service.






Receiver with Original Remote (by receiver model number, in numerical order)			Replacement Remote and Part Number
222k	20.0	21.0	#161256 21.0 Kit  1 key, two sides  1 TV1  2 TV2
301 & 311	301: 1.5	311: 3.4	#176526 3.4 Kit
322	3.4	4.4.	#176539 4.4 Kit  Two keys, two sides  TV1 UHF Pro  TV1 UHF Pro  TV1 UHF Pro  to operate TV1 from a distance.





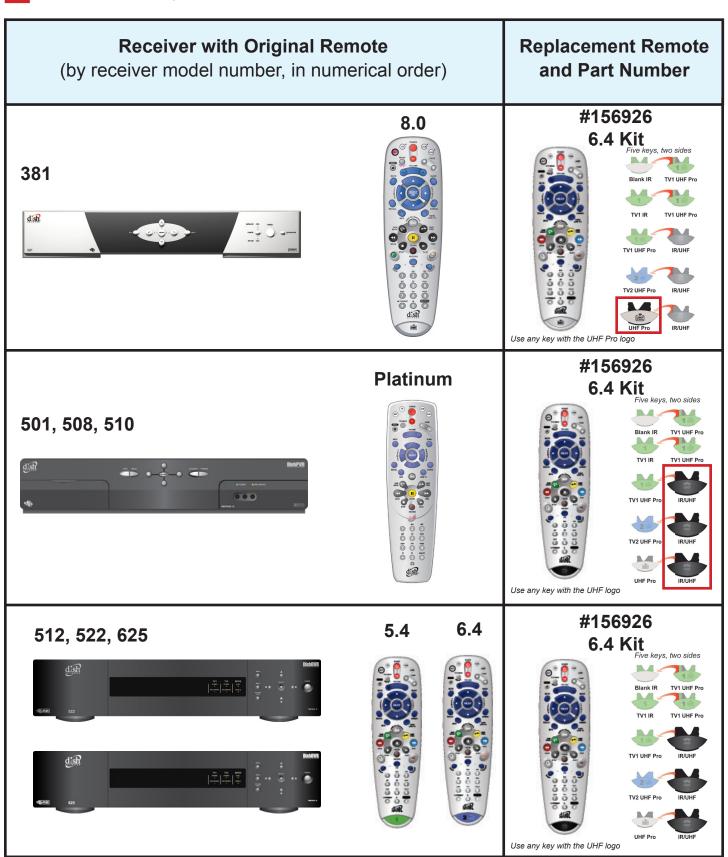






Red box indicates key(s) to use.

# **Receiver with Original Remote Replacement Remote** (by receiver model number, in numerical order) and Part Number 20.0 #176549 20.0 Kit 612 Note: 20.0 for TV1 Only (GREEN #1 **FIXED KEY)** #161256 20.0 21.0 21.0 Kit 622 1 key, two sides dish 000000 VIP622 DVR 000 #161256 20.0 21.0 21.0 Kit **722** 1 key, two sides





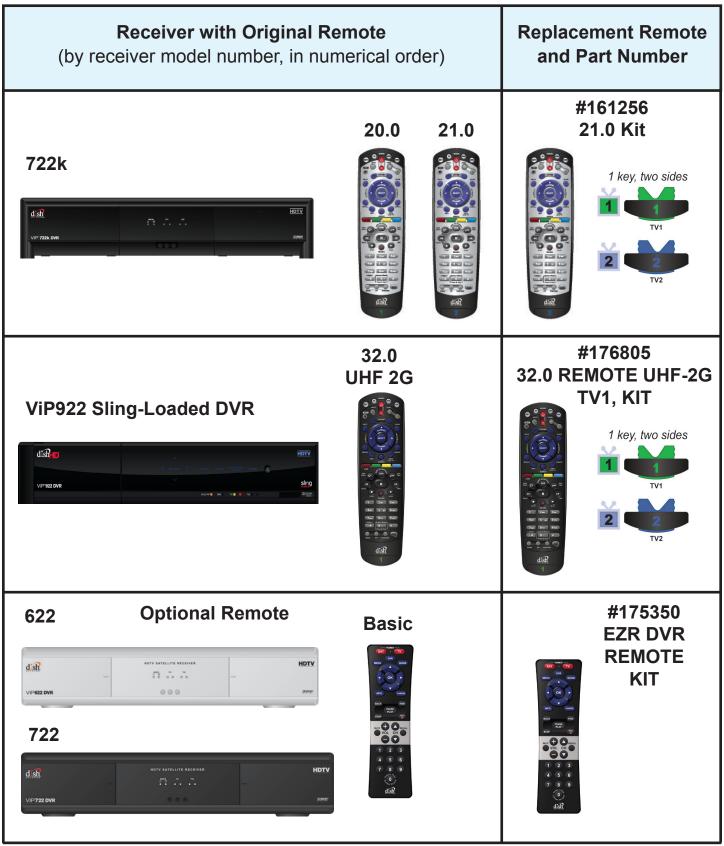

<sup>\*</sup> These items are only available through Service.



